

HyperWare® Retail Software

Quick Reference Card

Optimum T4100 SPOS32

Note: Printing a second receipt, the customer receipt, is an option for all transactions.

Credit Sale

Terminal Display	Action
SWIPE CUSTOMER CARD	Swipe credit card through card reader.
AMOUNT \$0.00	Enter amount of sale, press ENTER .
COMMS	Terminal dials host.
RESPONSE	Approval number is displayed on screen, and printed on receipt.
Approval 123456	

Debit Sale

Terminal Display	Action
SWIPE CUSTOMER CARD	Press Debit button.
SWIPE CUSTOMER CARD	Swipe card through card reader.
AMOUNT \$0.00	Enter amount of sale, press ENTER .
Waiting for PIN	Customer enters PIN on attached PIN Pad.
COMMS	Terminal dials host.
RESPONSE	Approval number is displayed on screen, and printed on receipt.
Approval 123456	

EBT Sale

Terminal Display	Action
SWIPE CUSTOMER CARD	Press EBT button.
SWIPE CUSTOMER CARD	Swipe card through card reader.
1-FOOD STAMP 2-CASH BENEFIT	Press 1 for FOOD STAMP or 2 for CASH BENEFIT, press ENTER .
SALE AMOUNT \$0.00	Enter amount of sale, press ENTER .
Waiting for PIN	Customer enters PIN on attached PIN Pad.
COMMS	Terminal dials host.
RESPONSE	Approval number is displayed on screen, and printed on receipt.
Approval 123456	

Credit Refund

Terminal Display	Action
SWIPE CUSTOMER CARD	Press Refund button.
SWIPE CUSTOMER CARD	Swipe card through card reader.
AMOUNT \$0.00	Enter amount of refund, press ENTER .
COMMS	Terminal dials host.
RESPONSE	Approval number is displayed on screen, and printed on receipt.
Approval 123456	

Debit Refund

Terminal Display	Action
SWIPE CUSTOMER CARD	Press Debit and Refund buttons.
SWIPE CUSTOMER CARD	Swipe card through card reader.
AMOUNT \$0.00	Enter amount of refund, press ENTER .
Waiting for PIN	Customer enters PIN on attached PIN Pad.
COMMS	Terminal dials host.
RESPONSE	Approval number is displayed on screen, and printed on receipt.
Approval 123456	



Customer Service: 1-908-516-5901
Terminal Support: 1-908-516-5902

24 HR Help Desk
1-800-441-1490

HyperWare® Retail Software

Reprint Last Receipt

Terminal Display	Action
SWIPE CUSTOMER CARD	Press Function, 72 , then ENTER .
1-MERCHANT RECPT 2-CUSTOMER RECPT	Press 1 for MERCHANT RECEIPT or press 2 for CUSTOMER RECEIPT, then ENTER .
REPRINT COMPLETE	Receipt is printed.

Offline/Force

Terminal Display	Action
SWIPE CUSTOMER CARD	Press Offline button.
OFFLINE MODE ENTER ACCOUNT NUMBER	Enter card number, press ENTER .
EXPIRATION DATE MMY	Enter expiration date, press ENTER .
AMOUNT \$0.00	Enter amount of sale, press ENTER .
ENTER APPROVAL CODE	Enter approval code from voice authorization.
TRANSACTION ACCEPTED	Offline/Force is complete.

Batch Report (Summary)

Terminal Display	Action
SWIPE CUSTOMER CARD	Press Reports button.
3-AUDIT 4-SUMMARY	Press menu key corresponding to Summary .
SCANNING BATCH	Terminal scans for Batch Totals and prints Summary Report.

Batch Report (Audit)

Terminal Display	Action
SWIPE CUSTOMER CARD	Press Reports button.
3-AUDIT 4-SUMMARY	Press menu key corresponding to Audit .
HOST NUMBER	Enter Host Number or '0' for all hosts.
PRINTING	Audit report is printed.

Batch Settle

Terminal Display	Action
SWIPE CUSTOMER CARD	Press Settle button.
ENTER PASSWORD	Enter password, press ENTER .
HOST NUMBER	Press 0 for all hosts or enter Host Number, then ENTER .
SCANNING BATCH	Terminal scans for Batch Totals.
SALES TOTAL CORRECT?	Press YES to confirm sale.
REFUND TOTAL CORRECT?	Press YES to confirm refund total.
SCANNING BATCH	Terminal scans for Batch Totals.
COMMS	Terminal dials host.
RESPONSE	Settlement is complete.
Approval 123456 SCANNING BATCH	Settlement report is printed.



World Headquarters

2851 West Kathleen Road • Phoenix, AZ 85053

602.504.5000 • 877.HYPERCOM within USA • Fax: 602.866.5380

e-mail: info@hypercom.com • web: www.hypercom.com

© Hypercom Corporation, 2005. Printed in the United States of America

940435-006, rev. A

3/2005